



S80 Batch Close


From the idle screen press **[FUNC]** to access the Function Menu.

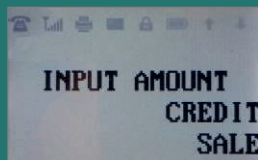

Press **[2]** for the batch close options.

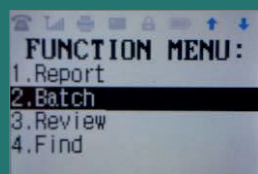

Press **[1]** to close the batch.

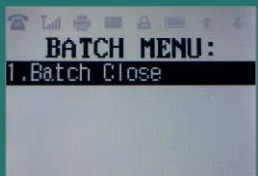


Note: The selections in the Batch Menu will vary with the Host Processor. With some there are a number of different choices but others start the batch process immediately.


The terminal will contact the host processor and print a batch report.

S80 Tip Adjust


From the idle screen press **[Func]** to access the Function Menu. Then scroll with the up/down arrow and select **[Tip Menu]** and then press **[ENTER]**.

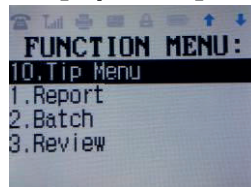


Press **[1]** for untipped transactions. Use the up/down arrows to scroll untipped transactions.

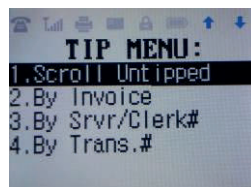


Press **[ENTER]** to select the desired transaction.

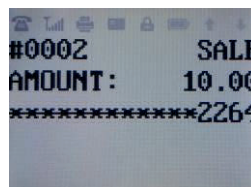

Enter the new tip amount and press **[ENTER]**.

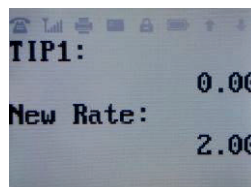

Then confirm the new tip amount by pressing **[ENTER]**.

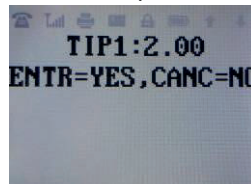

After the tip amount has been confirmed the new total amount is displayed briefly, or press **[CANCEL]**.



PAX Technology®

PAXPOS SOLUTION
S80 with the S300 or SP30
Quick Reference Guide
Restaurant



S80




S300

SP30




S80 Basic Credit Sale

From the idle prompt. Input the transaction amount and then press **[ENTER]**.

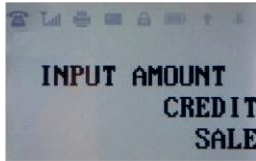

PINPAD – Input the tip amount and then press **[ENTER]**.

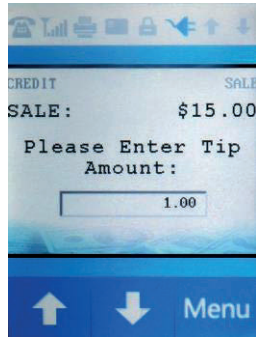

PINPAD – Insert or swipe card or manually enter the card account number and press **[ENTER]**.

PINPAD – If prompted enter the pin number and press **[ENTER]**.


PINPAD – If prompted the card holder signs the screen and selects **[ACCEPT]**.




Press any key to print the second receipt or press **[CANCEL]**.

S80 Credit Sale Void

From the idle prompt select the **[F4]** button until V/SALE displays and then press **[ENTER]**.

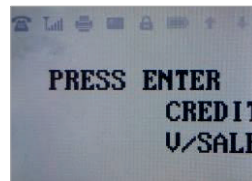

Input the transaction # to be voided and then press **[ENTER]**.

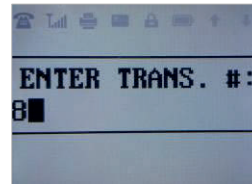


PINPAD – The terminal searches the database for a transaction that matches the criteria. Once found the transaction will be displayed, confirm the transaction and then press **[ENTER]**.

PINPAD – If prompted the card holder signs the screen and selects **[ACCEPT]**.




The terminal then prints a receipt. Press any key to print the second receipt or press **[CANCEL]**.

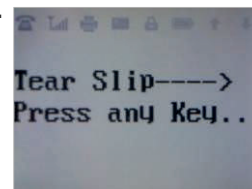


S80 Activate Gift Card


From the idle prompt select the **[F3]** button until GIFT is displayed, then press the **[F4]** button until ACTIVATE is displayed.

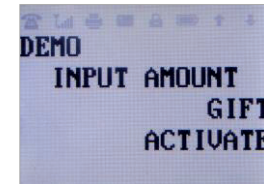

Input the issue/activation amount and then press **[ENTER]**.

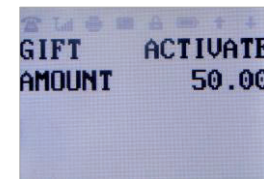

PINPAD – Swipe the gift card or manually enter the card account number and press **[ENTER]** and then if prompted enter the expiry date and press **[ENTER]**.

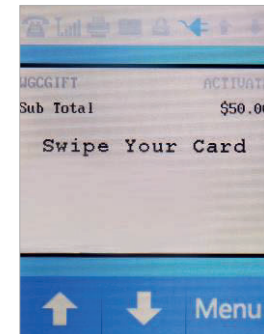

The terminal contacts the Host Processor for an approval and then prints a receipt.

Press any key to print the second receipt or press **[CANCEL]**.

